



Ceramic Heating Element For Dental Floss Machine

GREENWAY Ceramic Heating Element for Dental Floss Machine is laminated and vacuum treated, and then the metal and ceramics are co-fired at a high temperature of about 1650°C, and then welded with lead wires. It becomes a heating element of medium and low temperature. This kind of heating element is another new product after alloy electric heating wire and PTC heating element.

Model:dental floss 7040TH

Ceramic Heating Element for Dental Floss Machine

GREENWAY **Ceramic Heating Element for Dental Floss Machine** is laminated and vacuum treated, and then the metal and ceramics are co-fired at a high temperature of about 1650°C, and then welded with lead wires. It becomes a heating element of medium and low temperature. This kind of heating element is another new product after alloy electric heating wire and PTC heating element.

More details of Ceramic Heating Element for Dental Floss Machine:

Working Voltage: 20V-24V

Heating resistance: 4.6ohm

Model: GR1423

Heater element dimension: 70mm long*4.0mm diameter

Heating zone length: 9mm

Nickel leads: 80mm long or accordingly

Leads insulation: white Teflon or None or accordingly



Advantages Ceramic Heating Element for Dental Floss Machine:

1. Rapid temperature rise, 10 seconds up to the rated 300°C; 20 seconds up to 500°C~700°C.
2. High thermal efficiency, energy saving, no pollution, in line with environmental requirements.
3. Uniform heat, no open fire, safe to use.

4. The heater is in the vacuum state, and the heater is resistant to acid, alkali and harmful gases.
5. Long service life and small power attenuation.



Ceramic Heating Element for Dental Floss Machine composition:


1. Heater body: the content is not less than 95% white Al₂O₃ ceramics
2. Lead: 0.5mm nickel wire or nickel copper wire
3. Casing: Teflon
4. Heating material: tungsten

Ceramic Heating Element for Dental Floss Machine Application:

Floss stick /Texile/fabric Hot Heating/Floss picks equipment/Tooth Picks machine/Dental Toothpicks machine/Flosser equipment



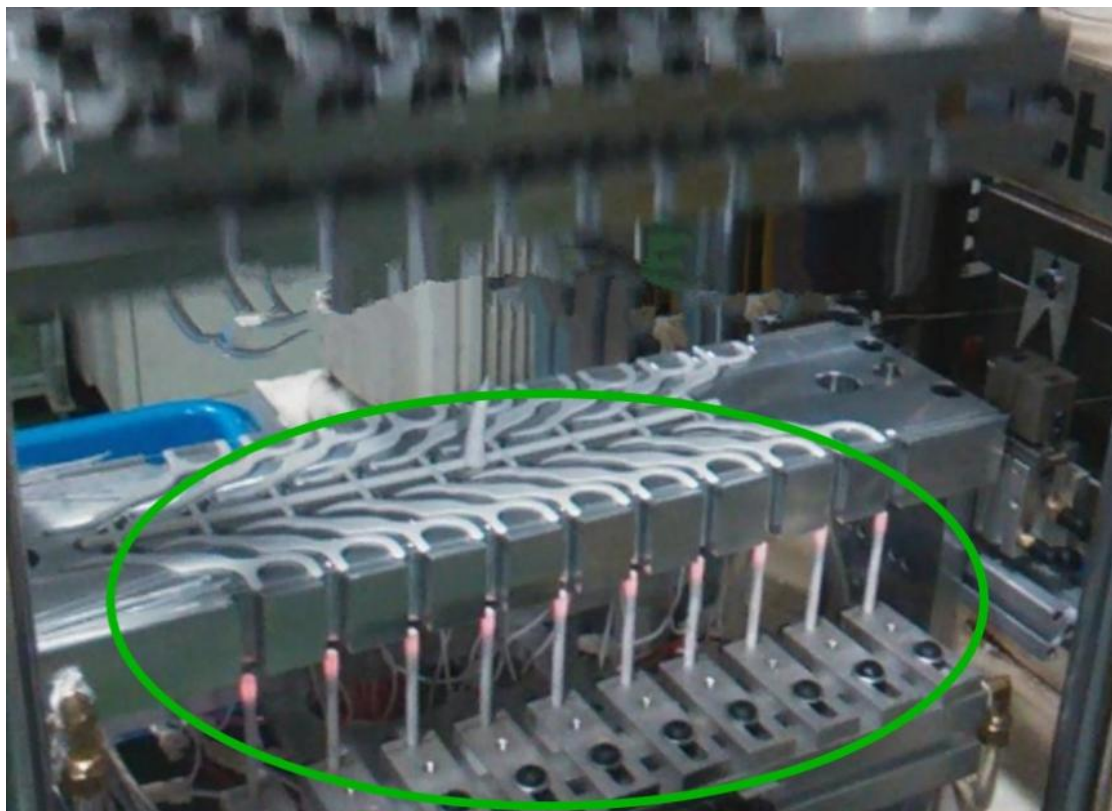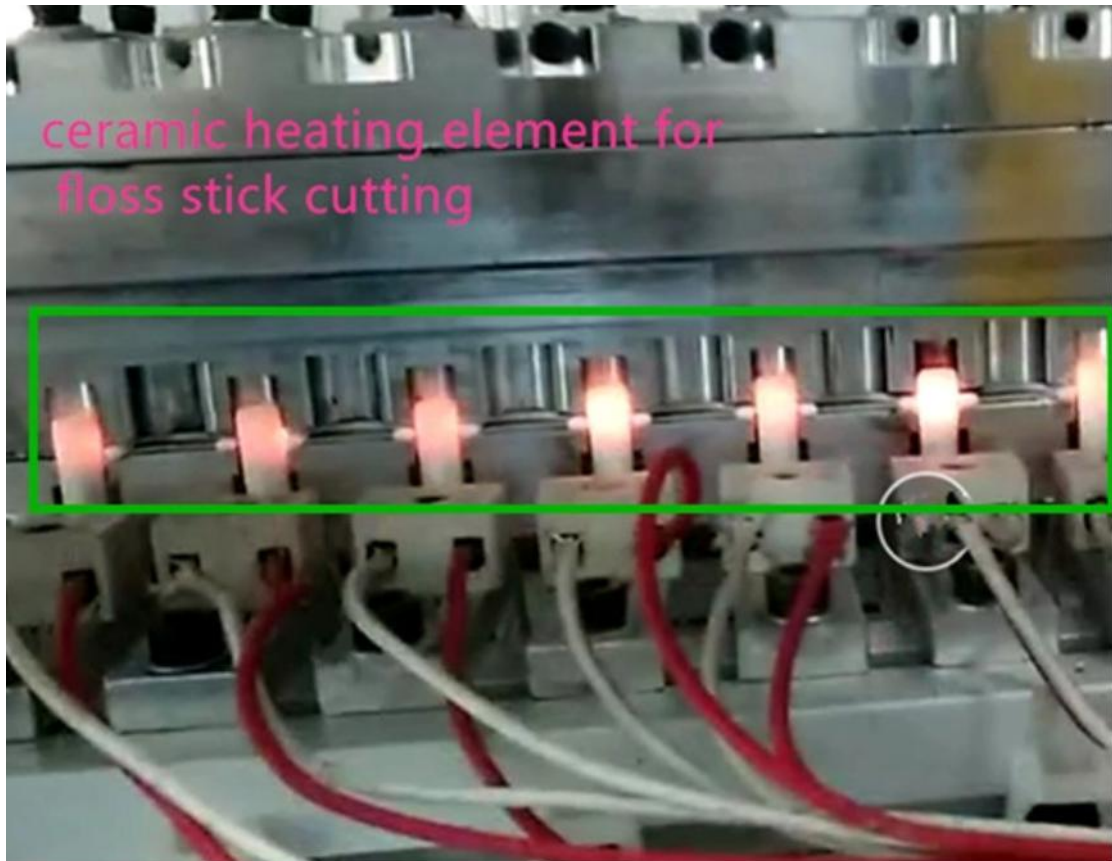

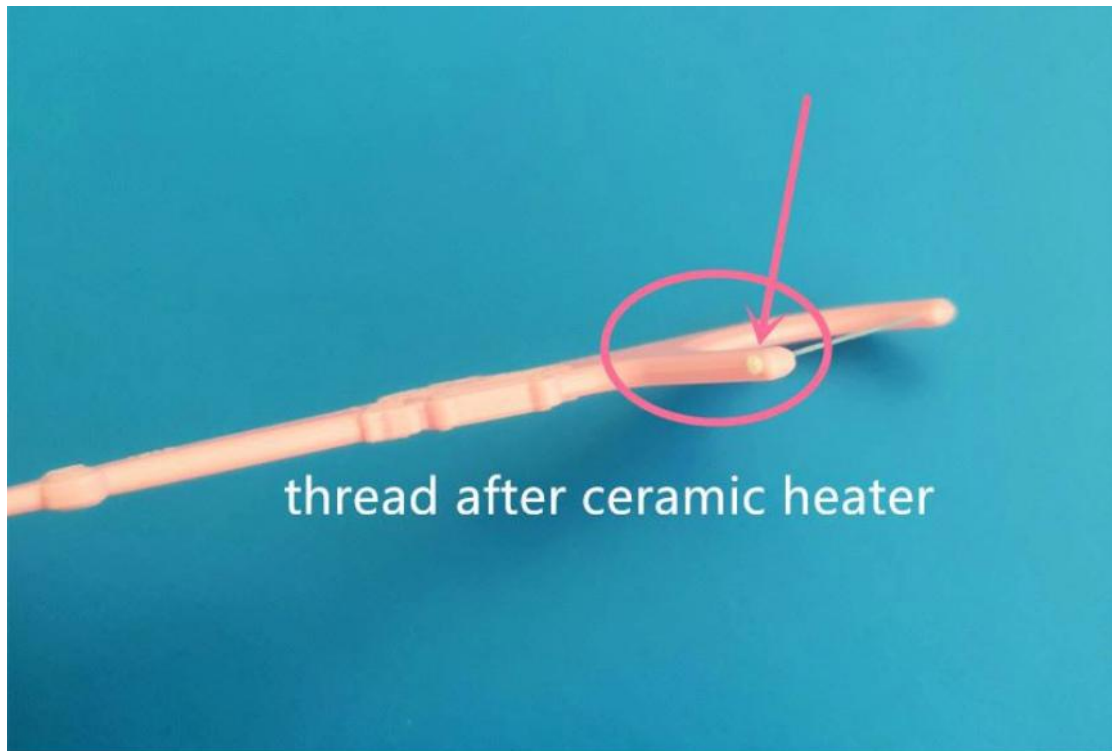

Ceramic Heating Element for Dental Floss Machine Shipment

When you place an order, please choose a shipping method and pay for the order including the shipping fee. Generally, we will send the items 1-3 days if there is stock once your payment is completed.